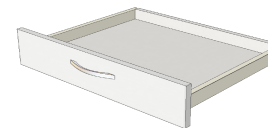




**CONALCRI**  
*Mobilă pe măsura ta !*

**SERTAR L597/H120**



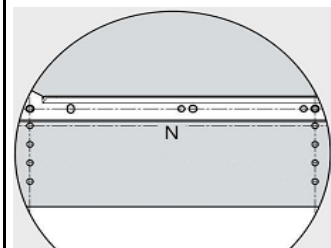
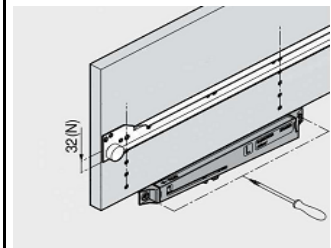
**pasul 1:**

montarea glisierii si amortizarii pe corp

**necesar feronerie:**

4 holsurub 3,5\*18

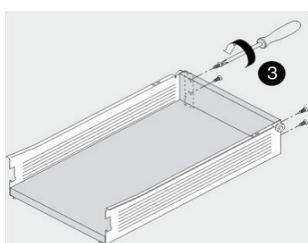
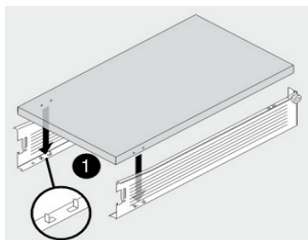
6 eurosurub 6\*13

**pasul 2:**

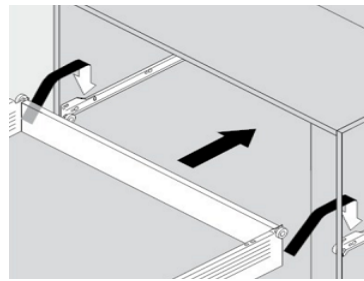
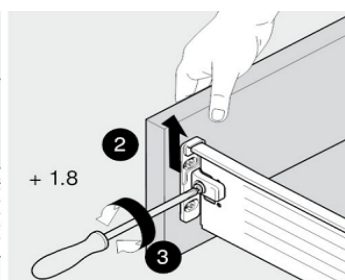
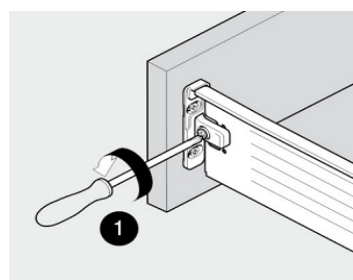
asamblarea sertarului

**necesar feronerie:**

6 holsurub 3,5\*16

**pasul 5:**

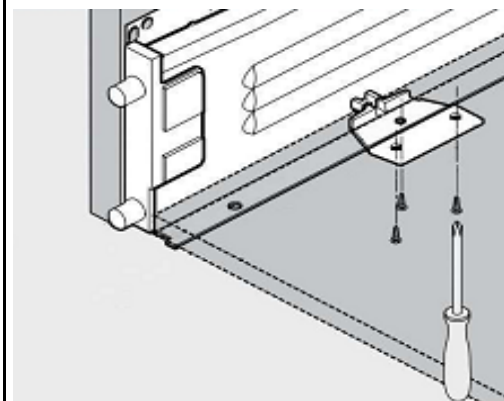
introducerea sertarului in corp

**reglare sertar****pasul 3:**

fixarea piesei de amortizare sub sertar

**necesar feronerie:**

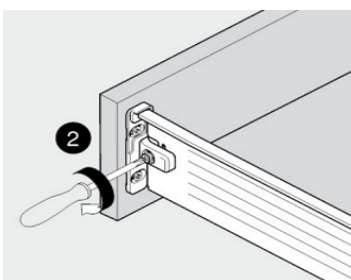
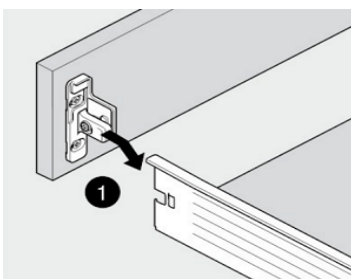
3 holsurub 3,5\*16

**pasul 4:**

fixarea cuplajelor pe fata de sertar

**necesar feronerie:**

4 holsurub 3,5\*18

**continut pachet:**

1 fata sertar 120\*597

1 fund sertar 533\*448

1 spate sertar 533\*39

1 set glisiera Metabox N

1 amortizor glisiera Metabox

9 holsurub 3,5\*16

8 holsurub 3,5\*18

6 eurosurub 6\*13