




**CONALCRI**  
*Mobilă pe măsura ta !*


**USA L397/H718**



**pasul 1:**  
fixarea balamalelor pe usa  
**necesar feronerie:**  
2 balama aplicata cu amortizare  
4 holsurub 3,5\*18


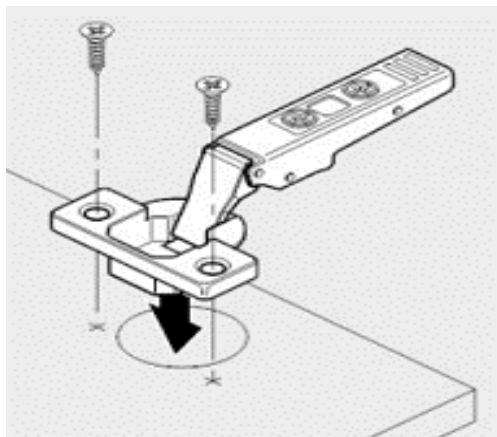


**pasul 2:**  
fixarea placutelor de balama  
**necesar feronerie:**  
2 placuta balama  
4 eurosurub 6\*13 (pt placuta balama)



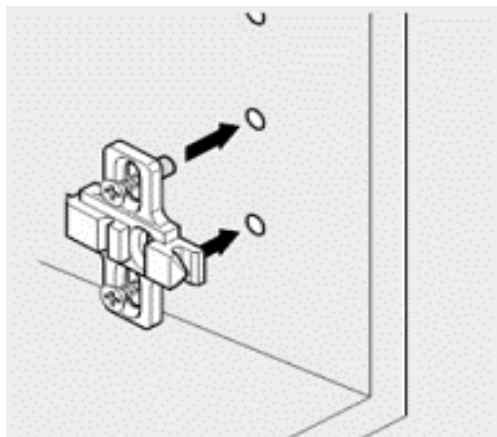


stabilirea gaurilor in care se monteaza placuta se face dupa masurare


**pasul 3:**  
clipsarea usii pe corp

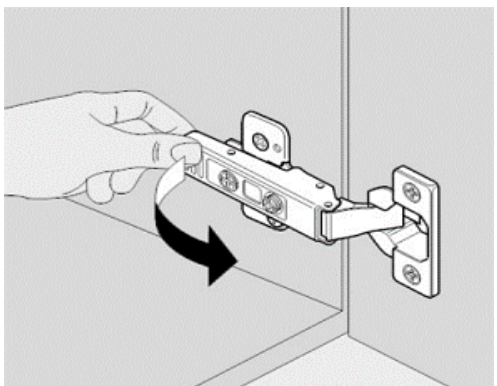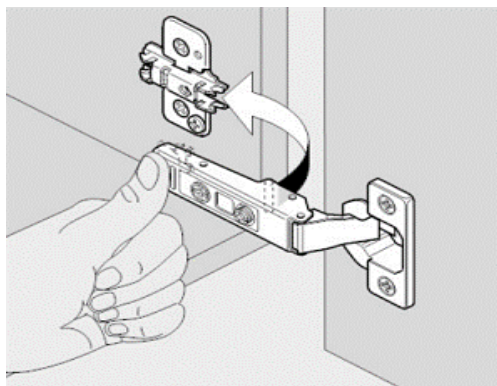


reglare usa

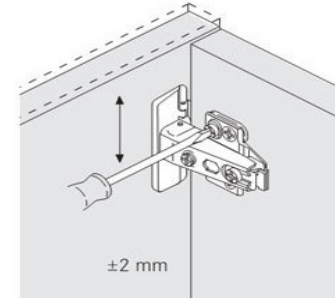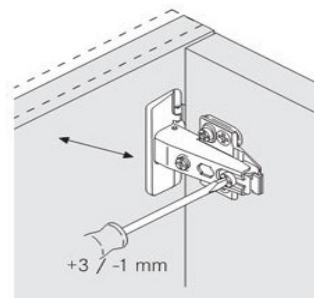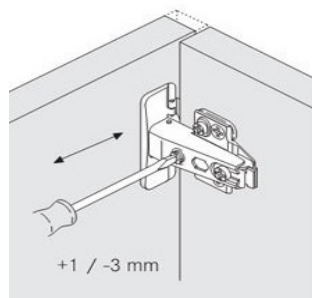

activare amortizare

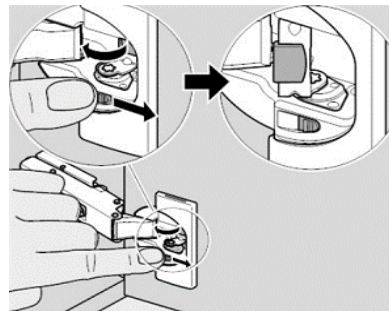

dezactivare amortizare

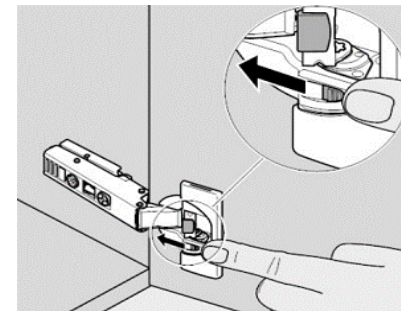

1 usa 718\*397

**continut pachet:**

2 balama cu amortizare  
2 placuta balama  
4 holsurub 3,5\*18  
4 eurosurub 6\*13