





USA L197/H718

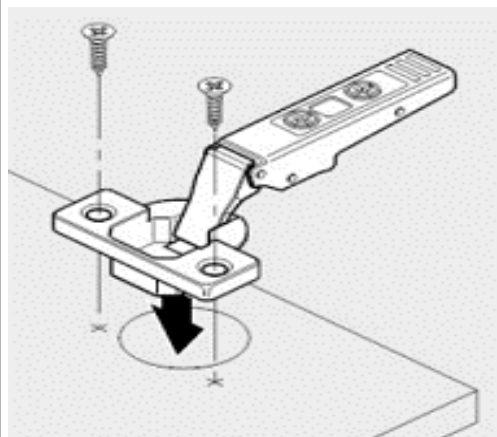

pasul 1:
fixarea balamalelor pe usa
necesar feronerie:
2 Mini balama fara amortizare
2 Surub Lemn SPAX cap inecat , 3.5x18





pasul 2:
fixarea placutelor de balama
necesar feronerie:
2 Placuta fixare in cruce Blum Clip
2 Surub Lemn SPAX, 3.5x18



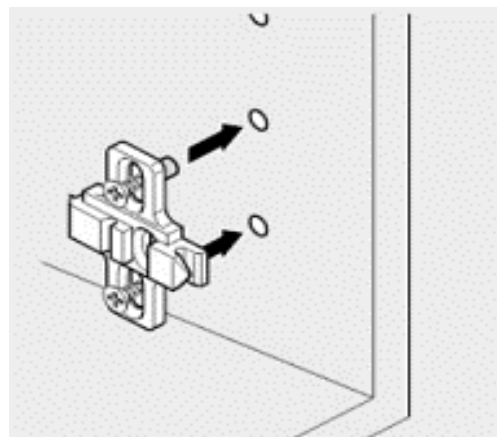


stabilirea gaurilor in care se monteaza placuta se face dupa masurare


pasul 3:
clipsarea usii pe corp

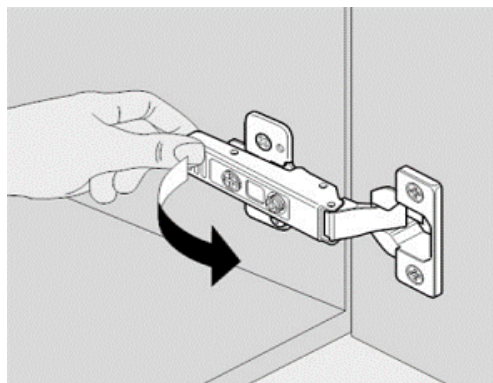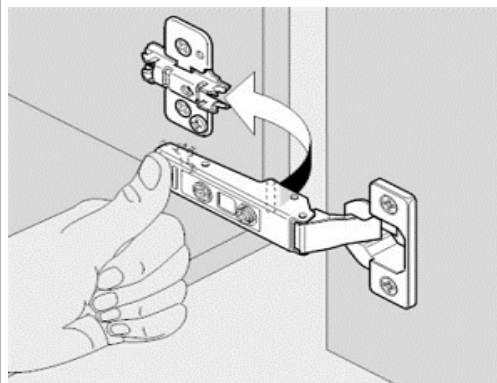


reglare usa

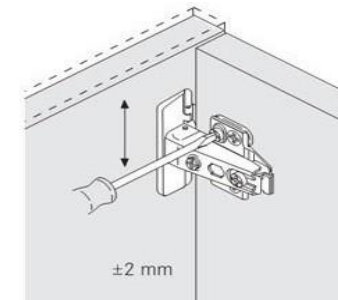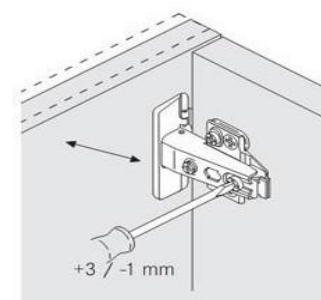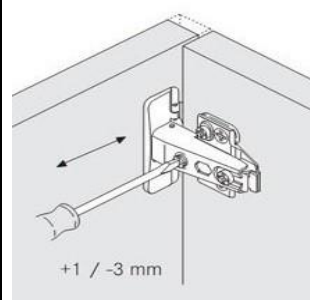

activare amortizare

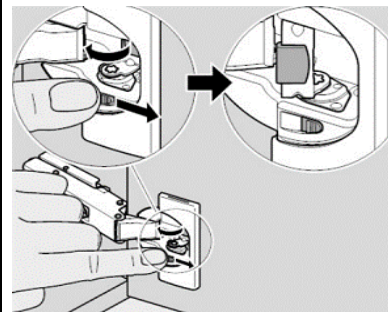

dezactivare amortizare

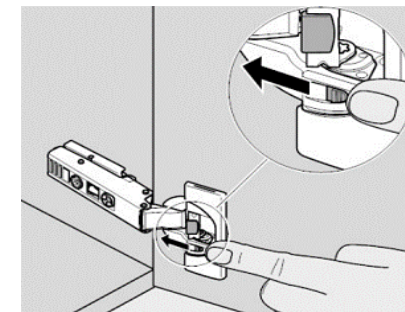

1 usa 718*197

continut pachet:

2 Mini balama fara amortizare
2 Placuta fixare in cruce Blum Clip Expando , 0mm
4 Surub Lemn SPAX cap inecat , 3.5x18

mobilă modulară